

# SERVICE MANUAL

## BG-1S CHASSIS

MODEL

COMMANDER DEST. CHASSIS NO.

KV-2197M5T RM-870 ME SCC-J35X-A

KV-T21MNA

KV-21Q2


KV-21M2

KV-2199M5T

TDA 8375A

MODEL

COMMANDER DEST. CHASSIS NO.

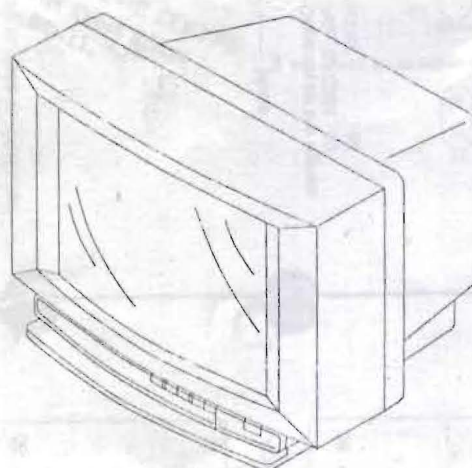

STR 6707

CXP 85220A

TDA 4665T

TDA 8375A

TDA 8395T

MYM 2234

TA 8248K

LA 7830


C 4558-G2

UM 2216-TX



TRINITRON® COLOR TV  
**SONY®**




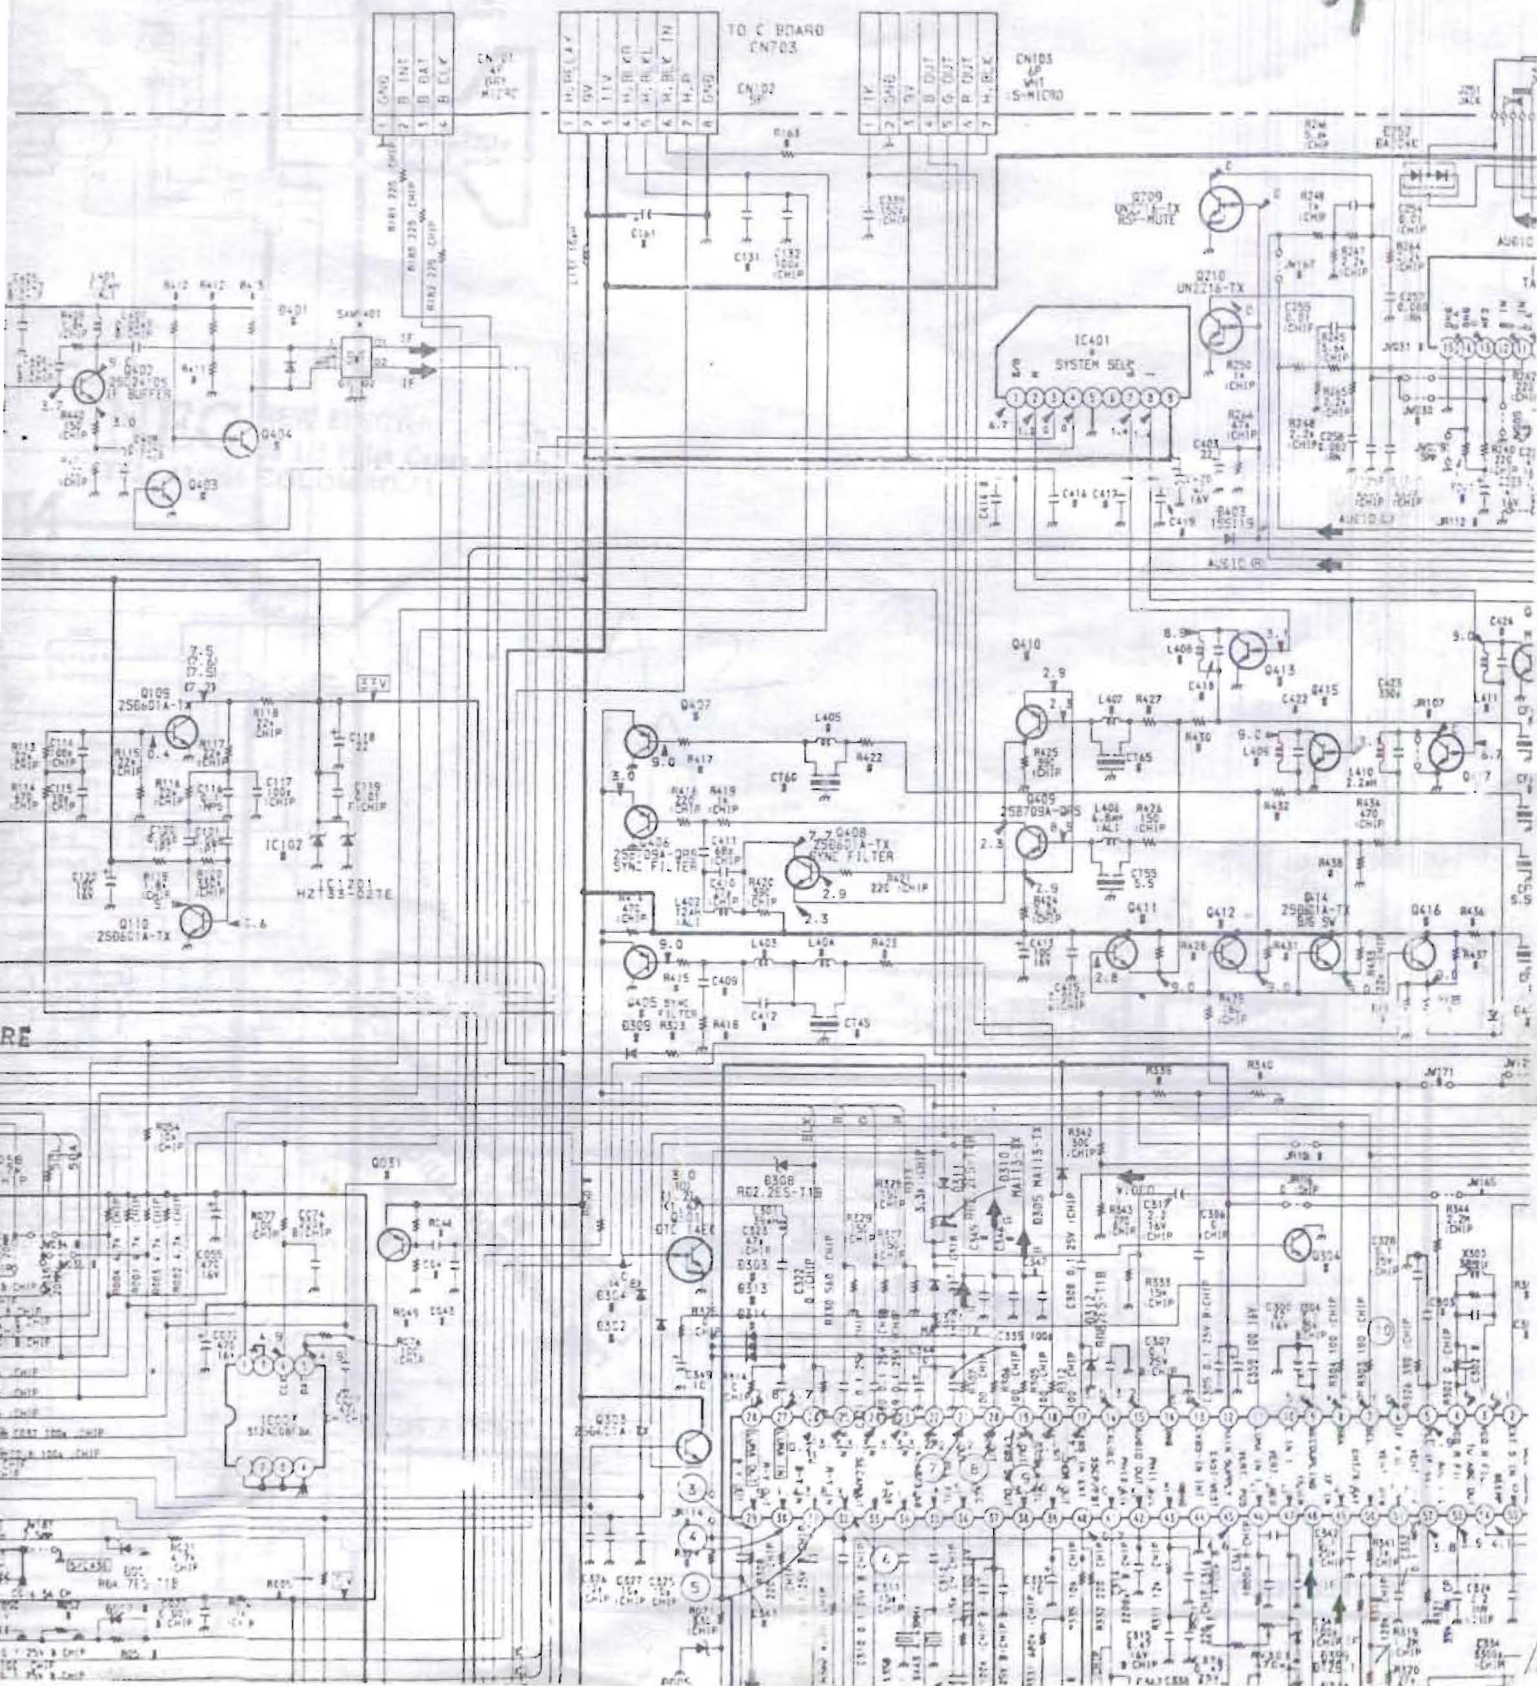






 


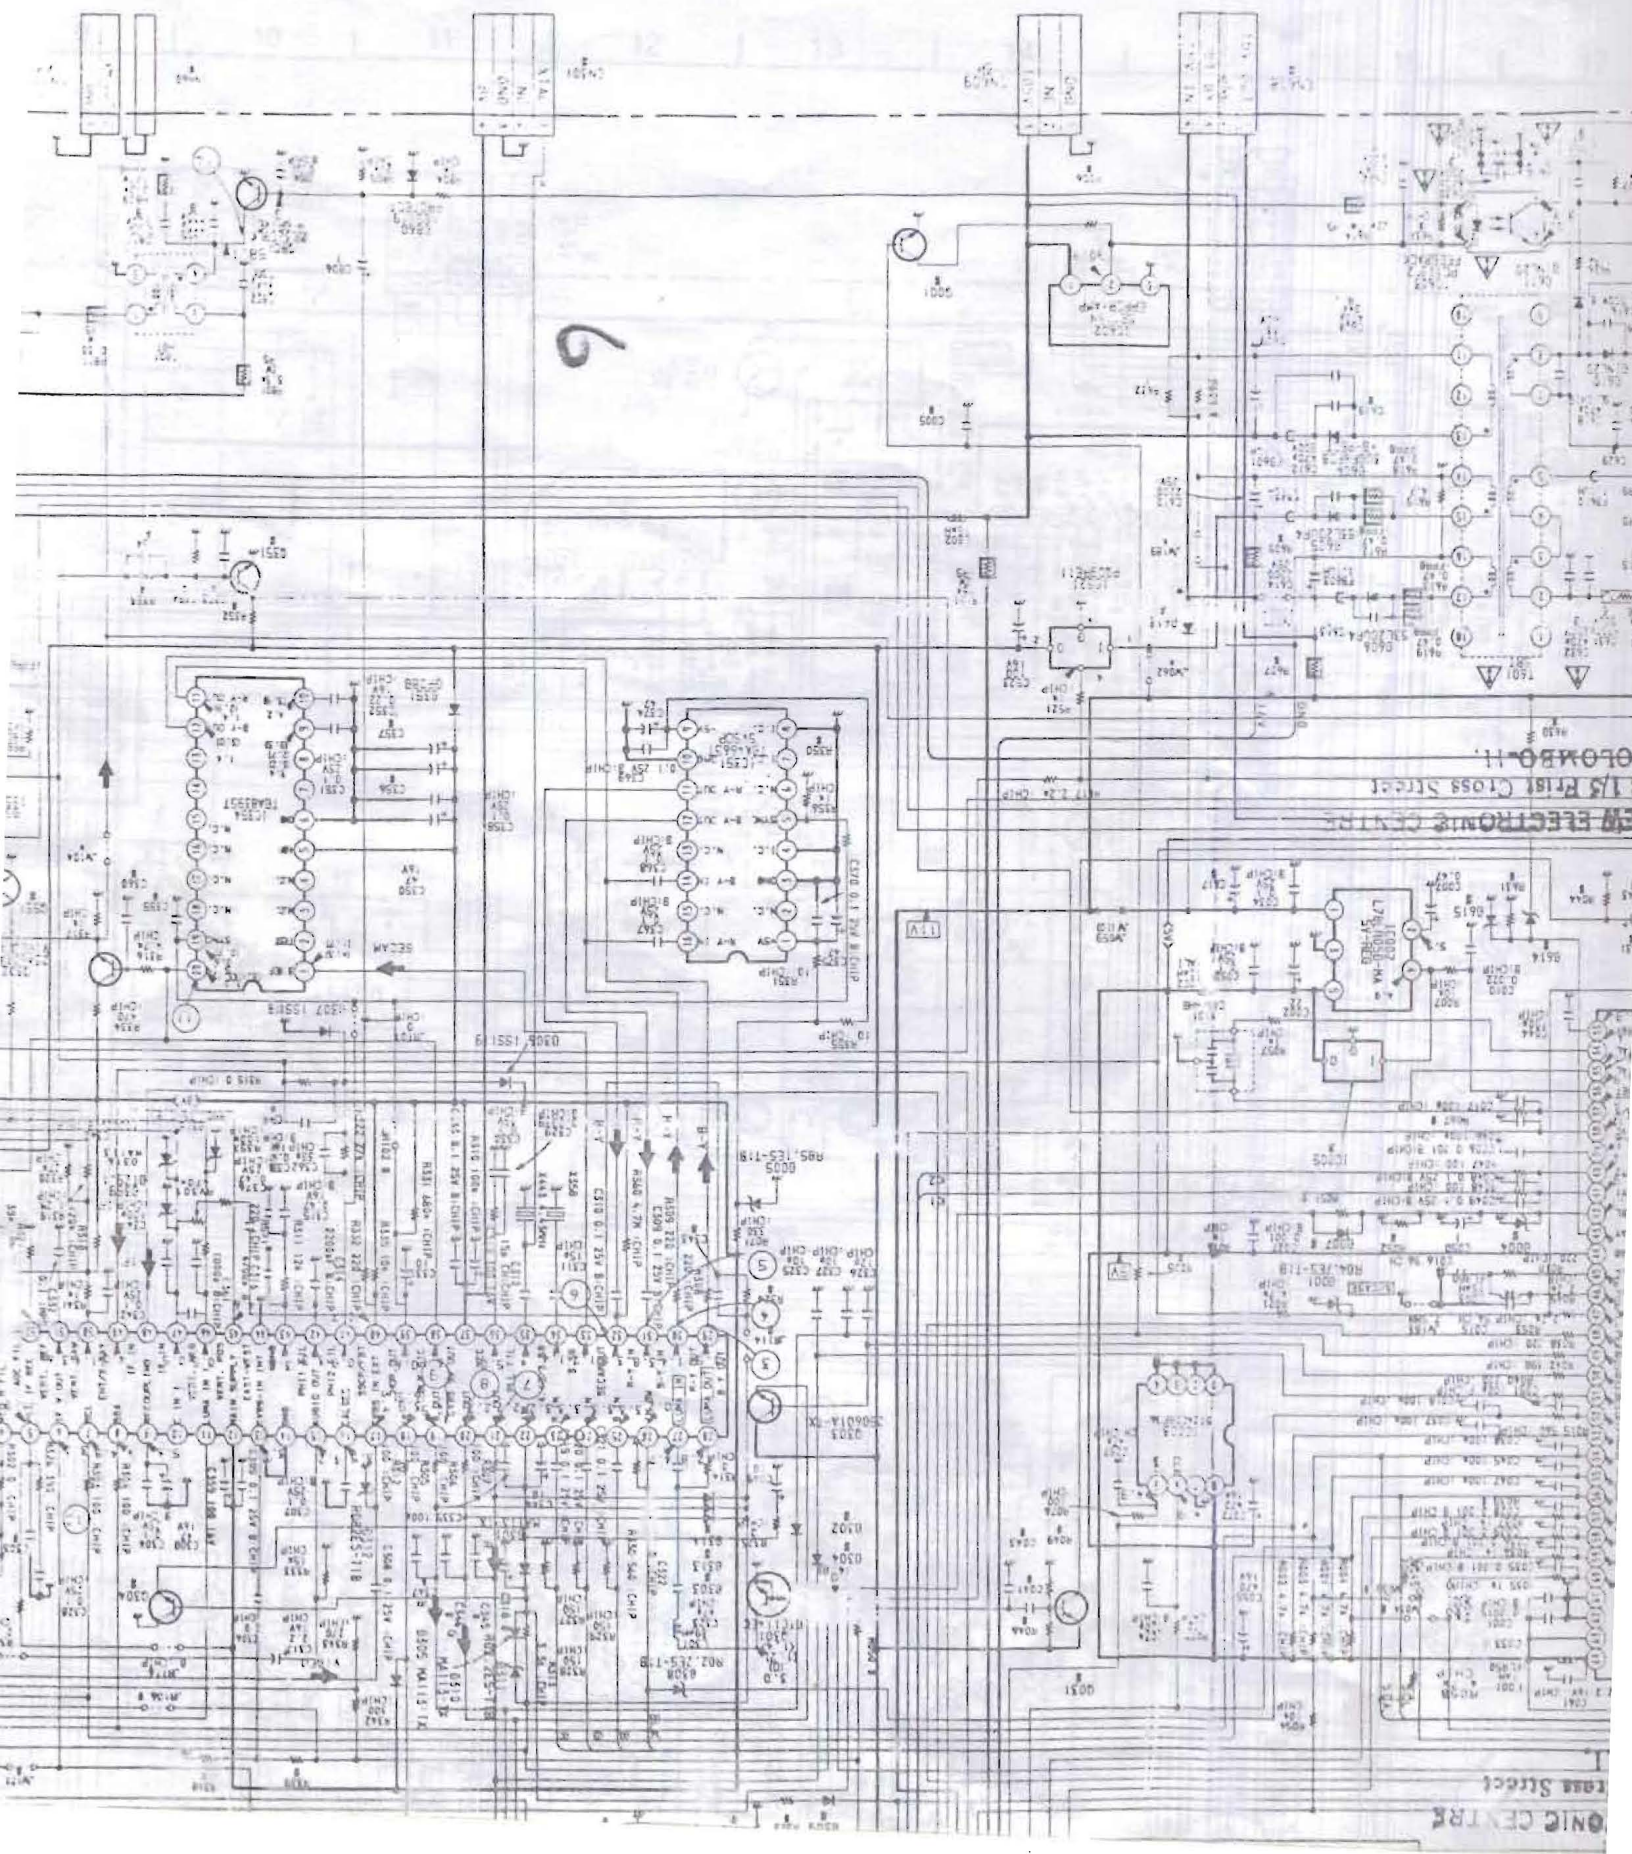



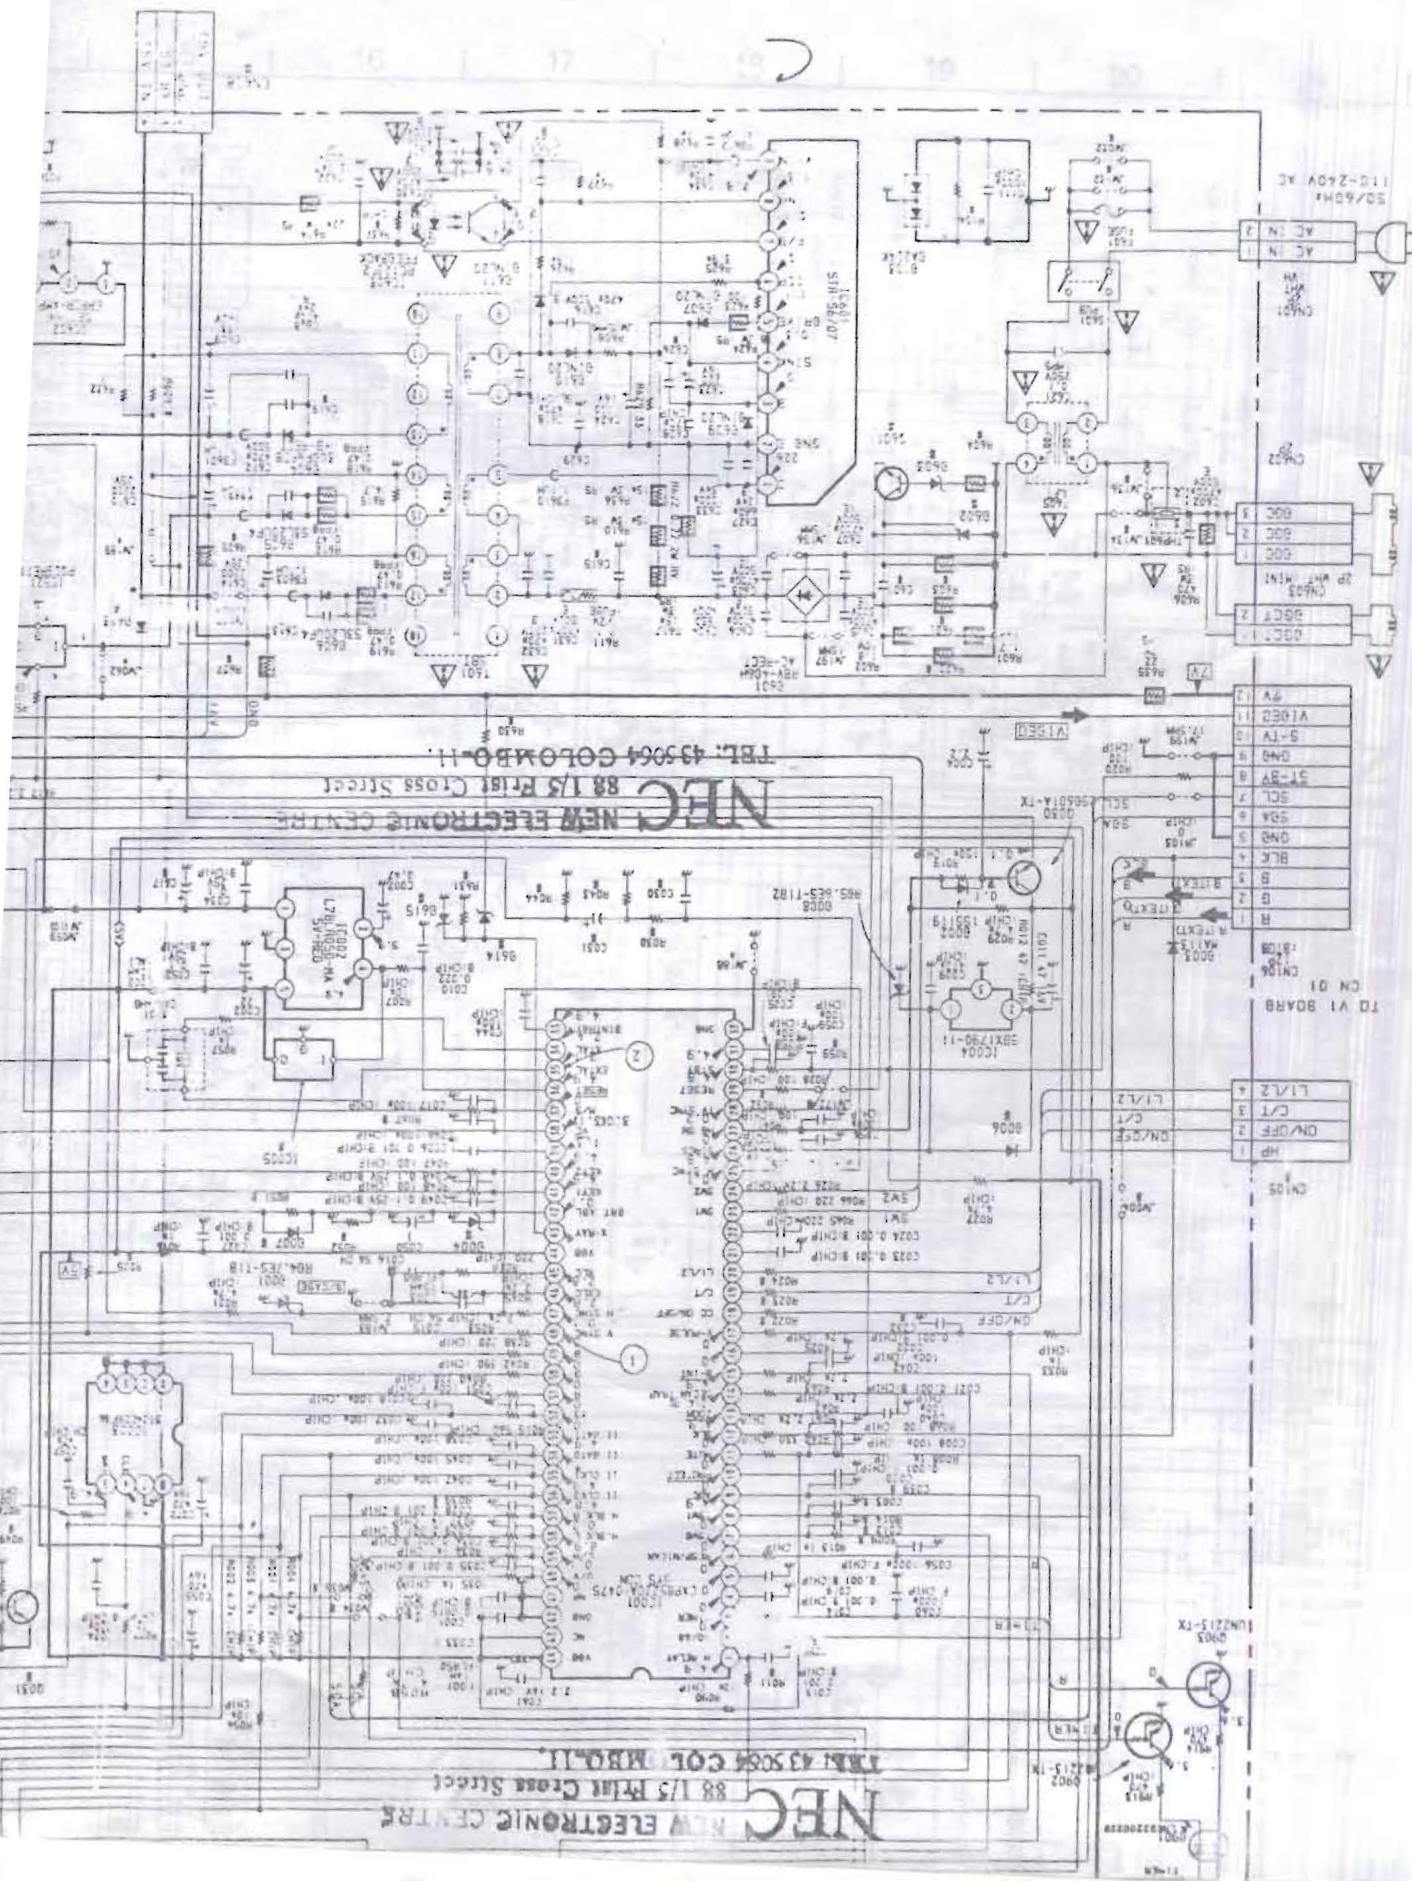







CN108  
TO 01 BOARD  
CN802



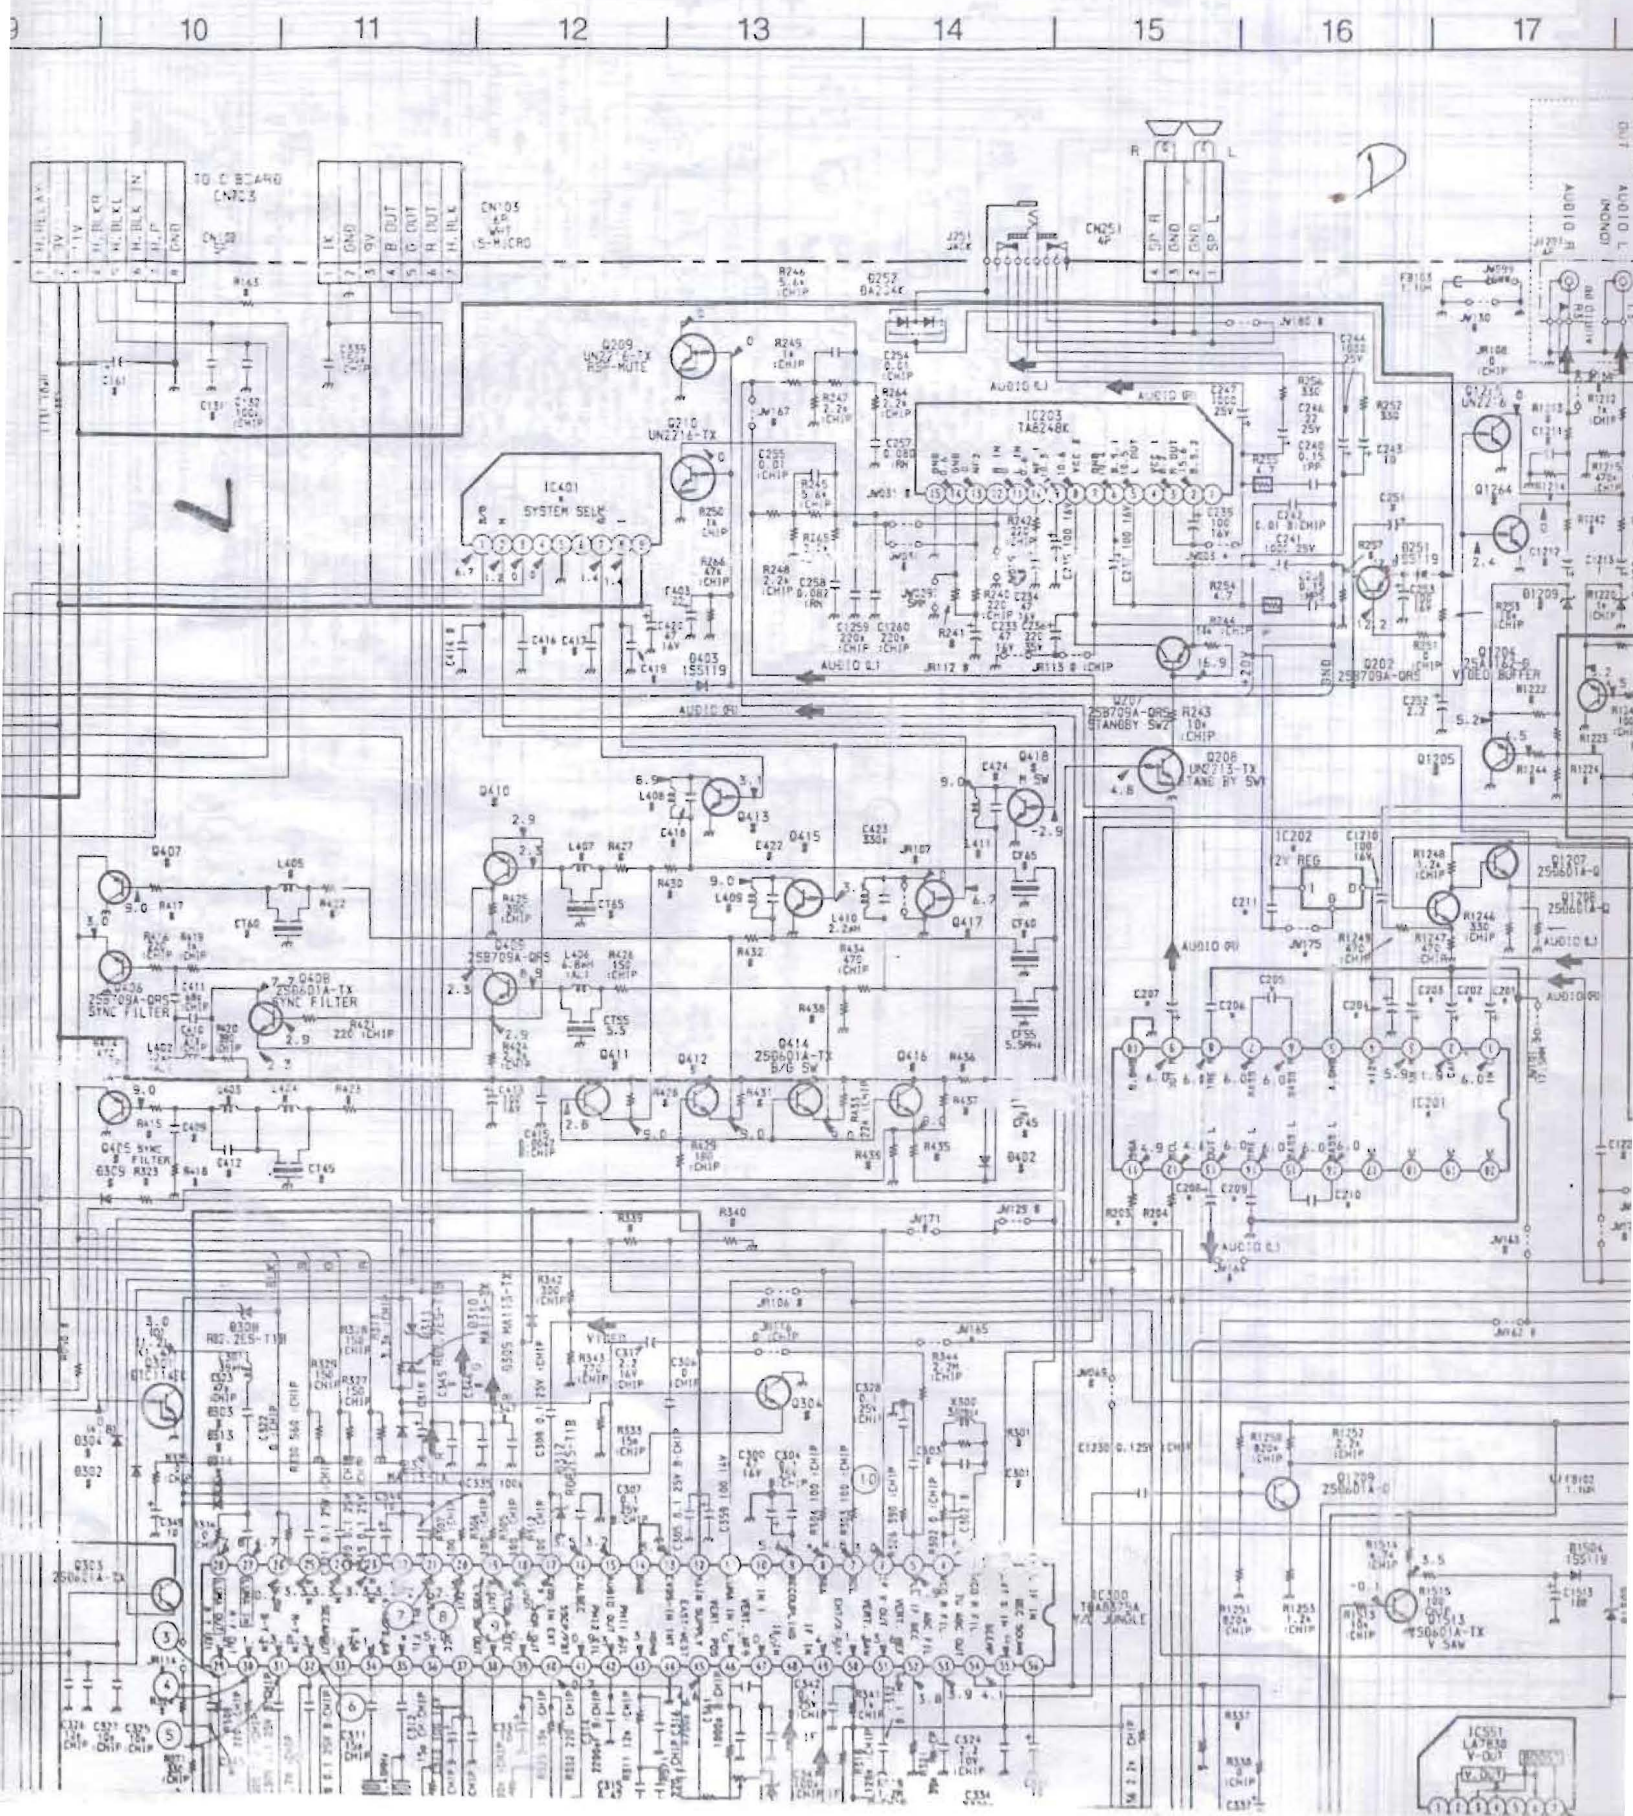



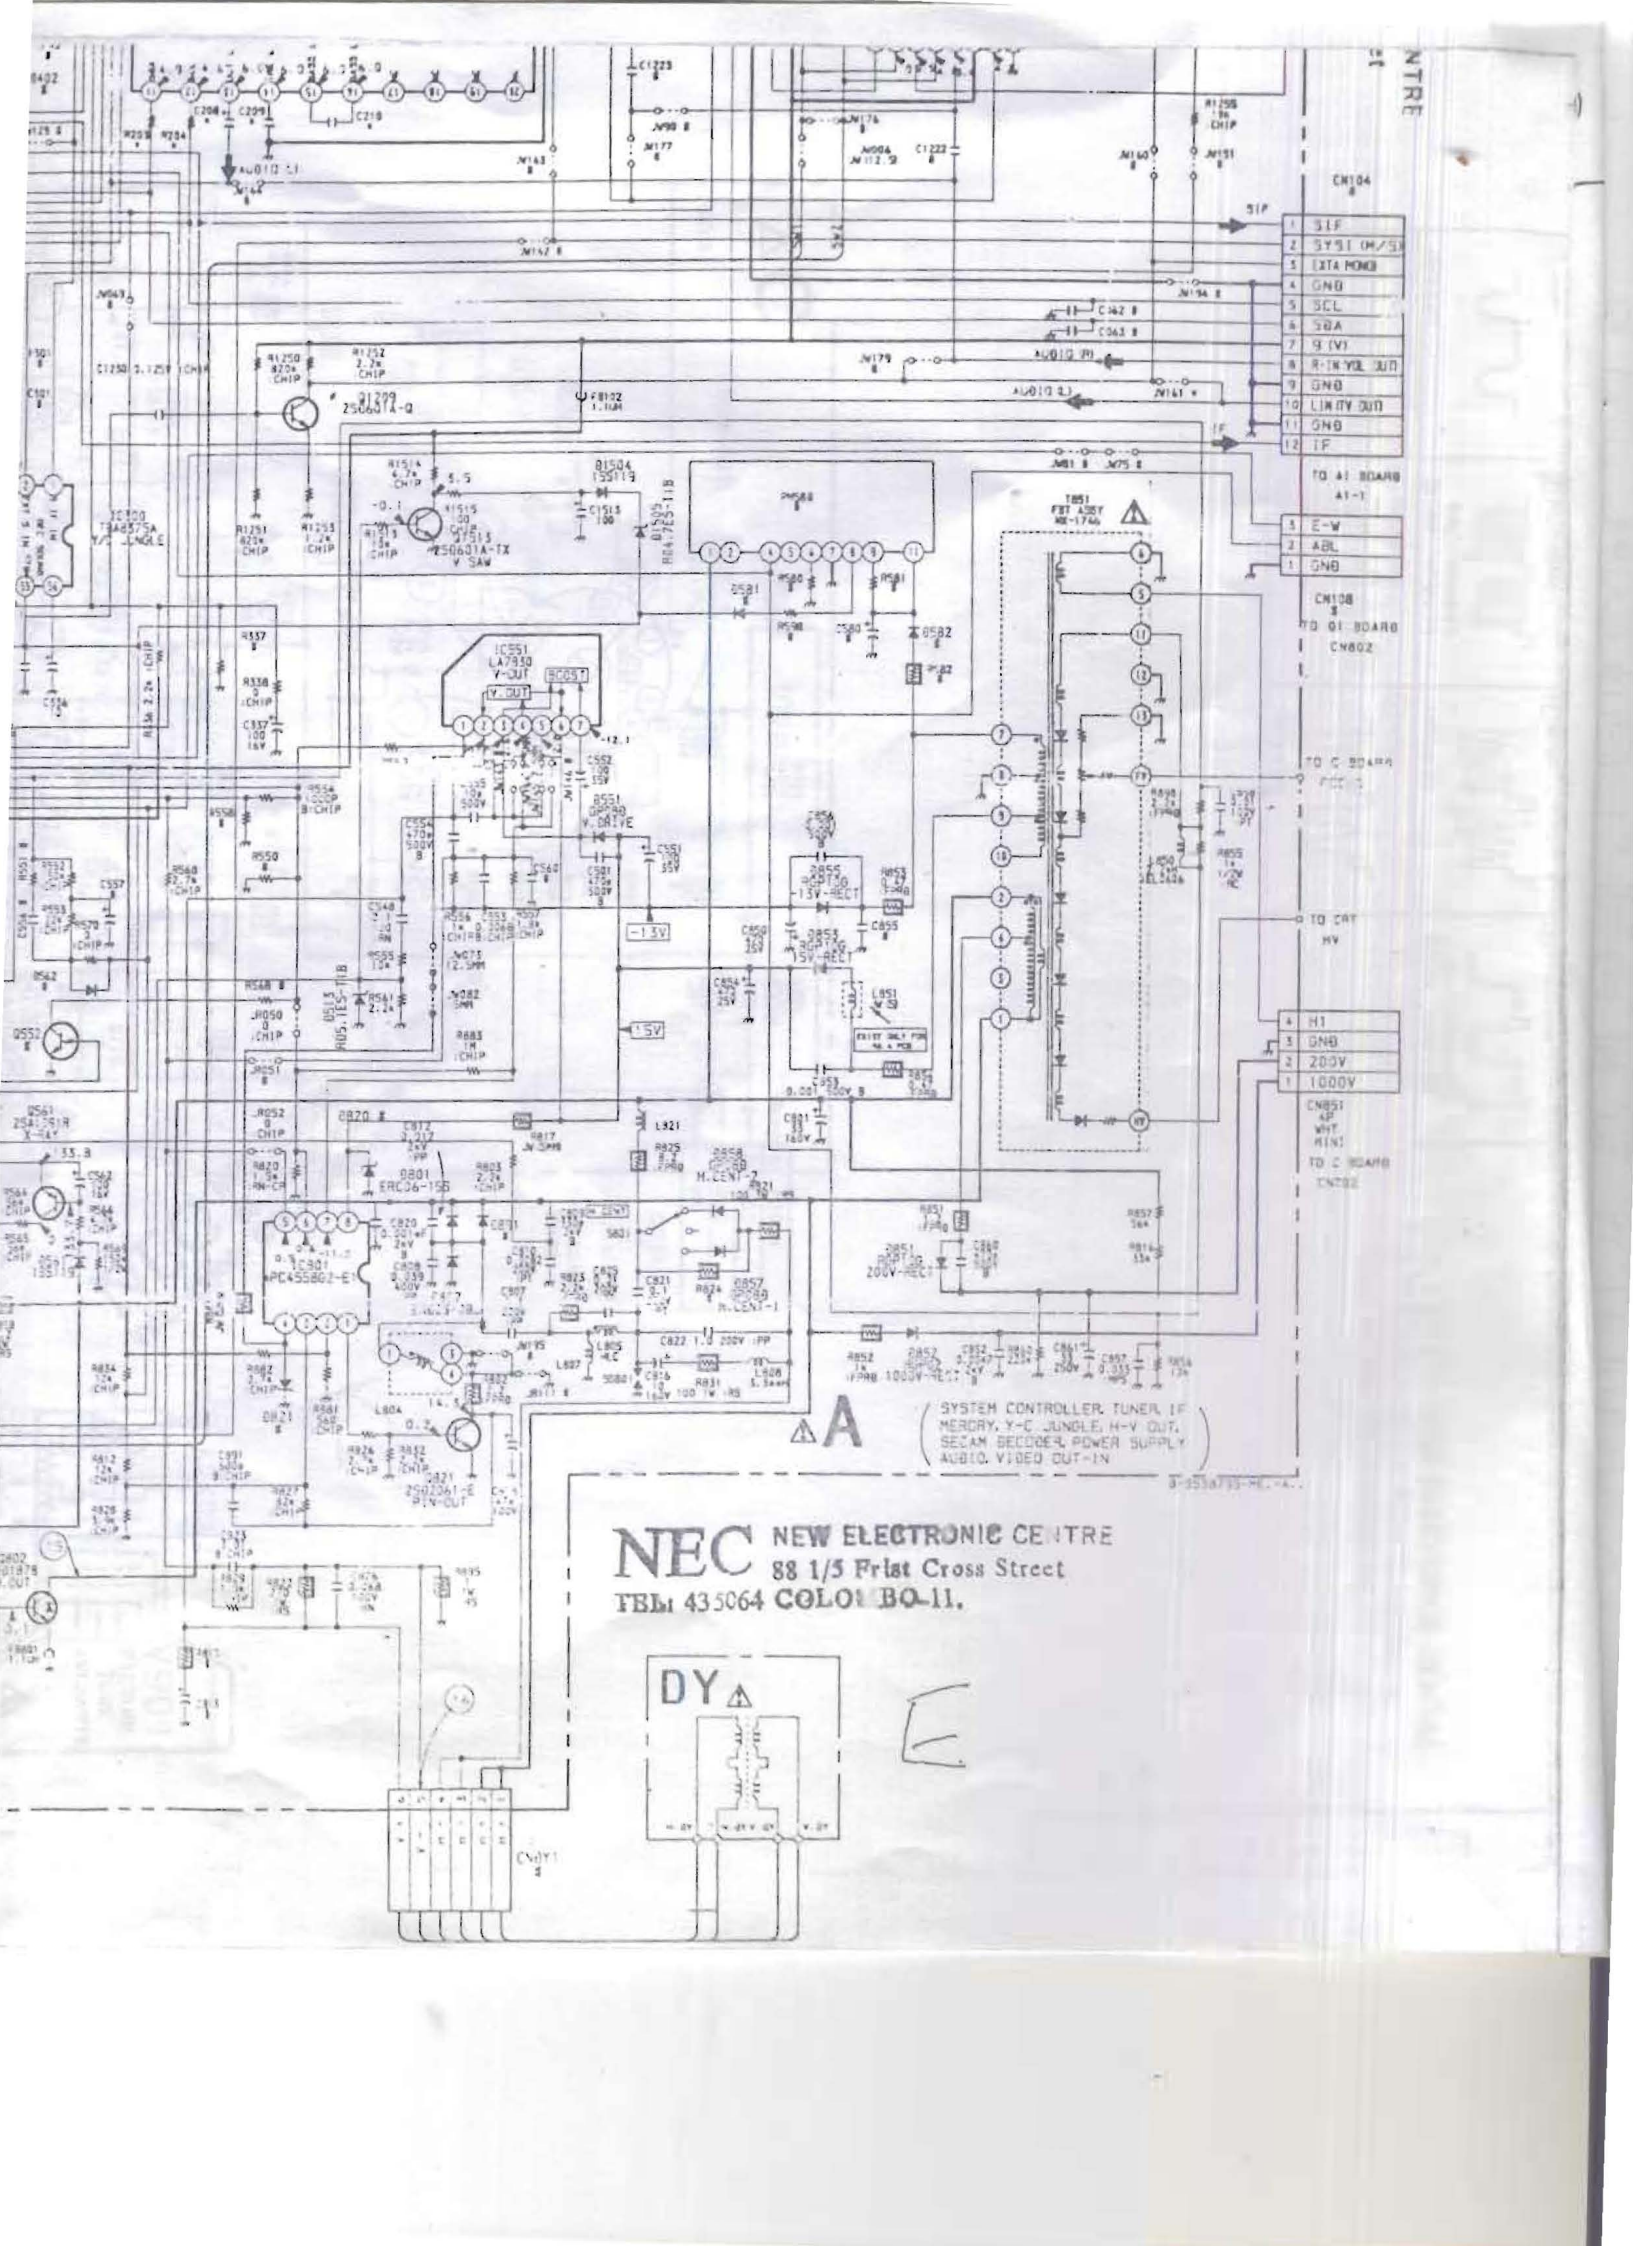

1	SIF
2	SYST. CLK/5V
3	EXTA MONO
4	GND
5	SCL
6	SBA
7	9 (V)
8	R-TR YEL. OUT
9	GND
10	LINK TV OUT
11	GND
12	IF

TO A1 BOARD	
5	E-W
2	ABL
1	GND

TO G1 BOARD	
CN802	

TO C BOARD	
------------	--


TO CRT HV	
-----------	--

4	H1
3	GND
2	200V
1	1000V


TO C BOARD	
CN801	
AP WHT RING	

(SYSTEM CONTROLLER, TUNER, IF  
MEMORY, Y-C JUNGLE, H-V OUT,  
SECAM DECODER, POWER SUPPLY,  
AUDIO, VIDEO OUT-IN)

**NEC** NEW ELECTRONIC CENTRE  
88 1/5 First Cross Street  
TEL: 435064 COLOMBO-11.

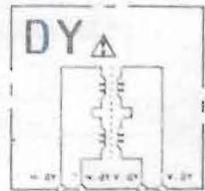



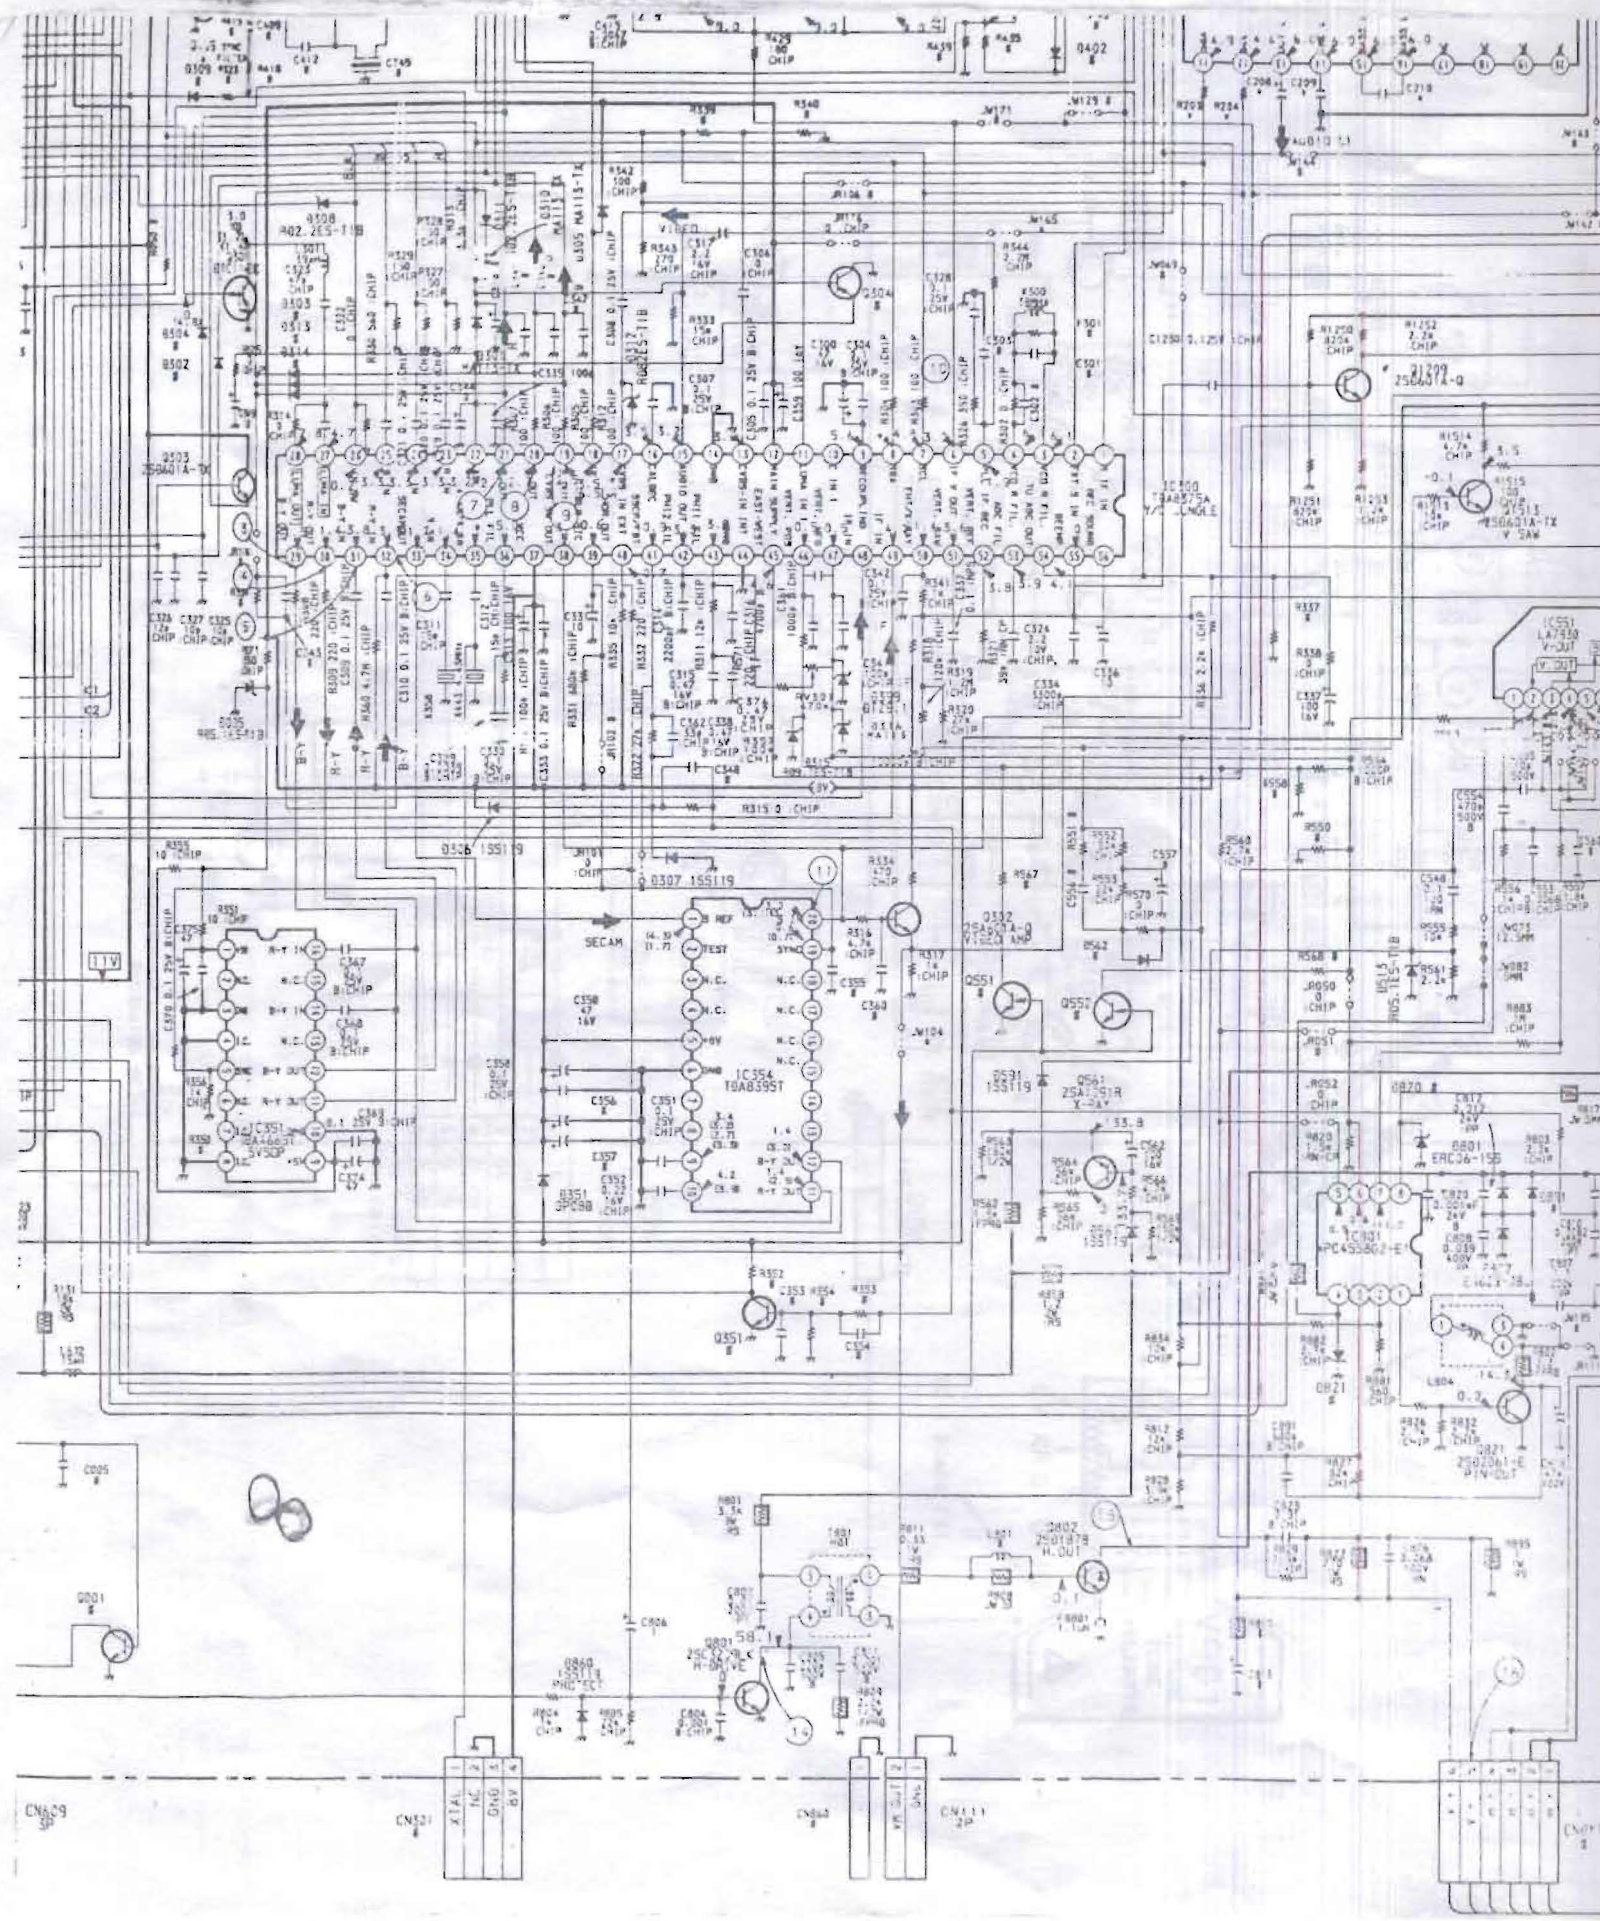

CN29


CN51

CN53

CN11

CN12



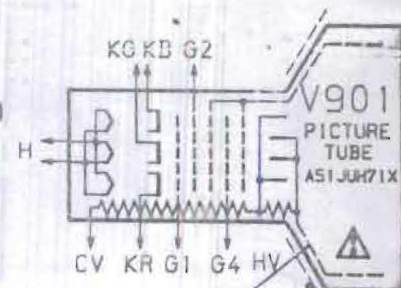



B	1
IC	2
GND	3
3V	4
TH RATE	5
GND	6
VIDEO	7
GND	8

